



Post-Acute Disinfectant Usage Guide



EX7000

TruElectrostatic for TruDisinfection™

- ✓ Enhanced electrostatic disinfectant application for more surface coverage
- ✓ Easy for staff to train & use
- ✓ Consistent, reliable application
- ✓ EPIX charge detect technology—no grounding required
- ✓ Lightweight & easy to operate


What's in my bundle?

- ✓ 13.1 g Altra Disinfectant Tablets (256 tabs/tub)
- ✓ EX-7000 Backpack Sprayer
- ✓ Ex7000 Extra Flushing Tank
- ✓ 2.5 gals EZ Fill Mixing Container(s) with spigot
- ✓ Equipment Guarantee



Broad spectrum cleaner and disinfectant

- ✓ Contains no peroxyacetic acid or bleach 9 Disinfects while it cleans
- ✓ pH Neutral
- ✓ Mild odor
- ✓ Formulated to disinfect and clean washable hard, non-porous surfaces
- ✓ Compact tablets maximize storage space

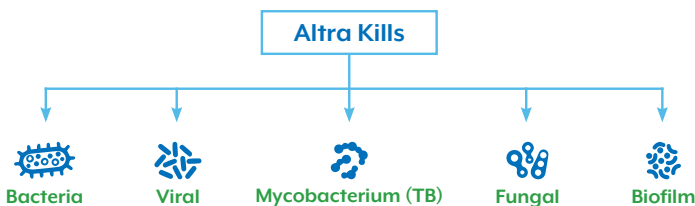

	Cleaning	Removes germs, dirt, and impurities from surfaces or objects.
	Disinfection	A process that results in the elimination of many or all pathogenic microorganisms on inanimate objects except for bacterial spores.
	Sanitizing	A process that kills all forms of microbial life, including spores.
	Dwell Time	The duration a surface must remain wet with a sanitizer/disinfectant to work effectively.

Dilution Chart (PPM=Parts Per Million)

Concentration	Altra
1076 ppm	(1) 13.1 g tab/1 gal
2153 ppm	(2) 13.1 g tabs/1 gal
4306 ppm	(4) 13.1 g tabs/1 gal
5382 ppm	(5) 13.1 g tabs/1 gal



Scan to view all the Safety Data Sheets (SDS).

Cleaning & Disinfection

Step 1:	Clean all surfaces, including floors, with Altra multi-purpose cleaner using microfiber cloths and flat mops.
Step 2:	Disinfect all surfaces using the EMist sprayer and Altra tablets for enhanced touchless disinfection.

* Ensure that all environmental cleaning & disinfection procedures are followed consistently and correctly. Thorough cleaning of environmental surfaces utilizing Altra multi-purpose HP cleaner and applying Altra tablets solution as a disinfectant is effective and sufficient procedure.

Cleaning, Sanitizing, and Disinfecting Frequency Table

Area	Concentration	Tablet Size & QTY	Schedule
Daily Room Disinfection	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/ 2 gals	Daily with microfiber cloth & spray bottle
Public Area Disinfection	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/ 2 gals	Daily
Terminal Clean Disinfection (Discharge Room)	4306 ppm – 4 mins	(4) 13.1 g tabs/ 1 gal (8) 13.1 g tabs/2 gals	After Patient Discharge
Outbreak Control/Cold-Flu Season	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/2 gals	3x daily patient care areas, common areas, and frequently touched areas
Offices (staff-medical)	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs / 2 gals	Daily or Bi-weekly
Transportation Buses	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/ 2 gals	After Each Use
Patient Transport (wheelchairs, walkers, etc.)	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/ 2 gals	After Each Use
Re-Usable Non-Critical Patient Care Devices (blood pressure cuffs, etc.)	1076 ppm – 10 mins	(1) 13.1 g tab/ 1 gal (2) 13.1 g tabs/ 2 gals	Daily
Isolation Areas	4306 ppm – 4 mins	(4) 13.1 g tabs/ 1 gal (8) 13.1 g tabs/ 2 gals	After Each Use

